

- Ammeter Shows
- 1 All alternator loads
  - 2 A&B Charge and discharge rates of batteries, including starter on Chassis Battery AG & BG
  - 3 A Total Chassis Battery Charge + Chassis Loads
  - 3 B Converter Load / Total Coach Battery Charge + Coach Loads
  - 4 A&B Chassis Load & Coach Load
  - 5 Starter

NOTE: ADD shows a connection needed to measure alternator/battery current without the starter.

