

Installation Instructions

Wind Wings- RV-24

The Wind Wings are mounted on the angled vertical member in the sliding window. Remove the plastic from the wind wing. Position the bracket in the center of the member vertically and mark the two holes. Drill and tap the holes for 8-32 screws. Install the bracket and replace the plastic on the wind wing bracket.

Installation Instructions

Wind Wings- RV-24

The Wind Wings are mounted on the angled vertical member in the sliding window. Remove the plastic from the wind wing. Position the bracket in the center of the member vertically and mark the two holes. Drill and tap the holes for 8-32 screws. Install the bracket and replace the plastic on the wind wing bracket.

Installation Instructions

Wind Wings- RV-24

The Wind Wings are mounted on the angled vertical member in the sliding window. Remove the plastic from the wind wing. Position the bracket in the center of the member vertically and mark the two holes. Drill and tap the holes for 8-32 screws. Install the bracket and replace the plastic on the wind wing bracket.

Installation Instructions

Wind Wings- RV-24

The Wind Wings are mounted on the angled vertical member in the sliding window. Remove the plastic from the wind wing. Position the bracket in the center of the member vertically and mark the two holes. Drill and tap the holes for 8-32 screws. Install the bracket and replace the plastic on the wind wing bracket.

Installation Instructions

Wind Wings- RV-24

The Wind Wings are mounted on the angled vertical member in the sliding window. Remove the plastic from the wind wing. Position the bracket in the center of the member vertically and mark the two holes. Drill and tap the holes for 8-32 screws. Install the bracket and replace the plastic on the wind wing bracket.

Installation Instructions

Wind Wings- RV-24

The Wind Wings are mounted on the angled vertical member in the sliding window. Remove the plastic from the wind wing. Position the bracket in the center of the member vertically and mark the two holes. Drill and tap the holes for 8-32 screws. Install the bracket and replace the plastic on the wind wing bracket.